

AF BI-FOLD DOOR FITTING INSTRUCTIONS (For recess installation)

- Ensure shower tray is level and check adjustment sizes given are correct for fitment to your application. Care must be taken when drilling into walls to avoid hidden pipes or electrical cables (fig 1).
- Take wall posts and set 15 mm in from edge of tray at both sides of recess, using a spirit level ensure wall posts are vertical and plumb(fig2), mark hole positions (Fig 3), remove the posts, drill holes and fit wall plugs.
- Place wall posts on both sides of bi-fold frame (fig 4) and (fig5).
- Lift the complete frame into recess (Fig 6) and secure into pre drilled wall using 30 mm screws, ensure screw collar is fitted to screw beforehand.
- Taking care not to scratch the unit mark and drill two 3.2 mm holes 150 mm from top and bottom on the inside of the enclosure through the wall posts and frame and secure with 10 mm screw again ensure screw collar is in place (fig 7).
- Finish off by fitting the screw cover caps, handle and running a bead of silicone along the outside of the frame and shower tray (Fig 8).

(DO NOT SEAL ON THE INSIDE OF THE ENCLOSURE).

Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



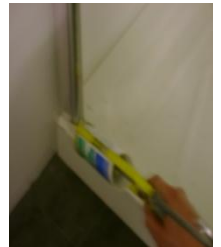
Figure 6



Figure 7

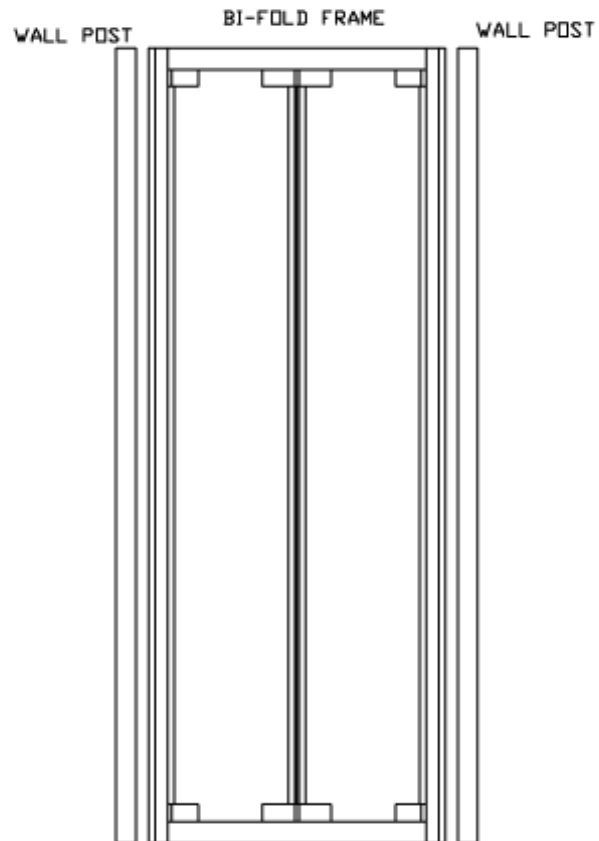







Figure 8



WHEN UNIT IS TO BE FITTED WITH A SIDE PANEL PLEASE REFER TO THE SIDE PANEL INSTRUCTIONS IN CONJUNCTION WITH THESE.

AF BI-FOLD DOOR FITTING INSTRUCTIONS
(For recess installation)



AQ BI-FOLD PARTS LIST	
	30 mm SCREWS X 6
	WALL PLUGS X 6
	SCREW COLLAR X 10
	SCREW CAP COVERS X 10
	10 mm SCREWS X 4

WHEN UNIT IS TO BE FITTED WITH A SIDE PANEL PLEASE REFER TO THE SIDE PANEL INSTRUCTIONS IN CONJUNCTION WITH THESE.