

## AQW - 1400 WALK-IN SHOWER ENCLOSURE FITTING INSTRUCTION

- Ensure shower tray is level and check adjustment sizes given are correct for fitment to your application. Care must be taken when drilling into walls to avoid hidden pipes or electrical cables (Fig 1).
- Connecting any external fittings at this point. Finish installation by tiling and sealing around the tray.
- Set the wall post and angled wall post in 15 mm from the edge of the tray. Using a spirit level ensure that the posts are vertical and plumb (Fig 2)
- Mark the hole positions (Fig 3) Remove the posts and drill holes for a suitable wall plug.
- Re-position the posts and secure using 30mm screws, ensuring that the screw collars are in place and that the angled wall post is against the side wall for the curved panel. Set at the correct angle to follow the profile of the tray.
- Insert the flat panel into the wall post (Fig 4) and the curved panel into the angled post (Fig 5) Ensure that the chrome plastic foot is in place in the counter sunk area of the tray and fixed to the bottom of the curved panel when installing (Fig 6).
- Taking care not to scratch the unit, mark and drill two 3.2 mm holes 150mm from top and bottom of the posts on the inside of the enclosure, and through the wall posts and panel frame (Fig 7) Take care to go into the cavity only! Secure with 10mm screws, again ensuring the screw collars are in place.
- Depending which hand the Enclosure has been installed, fit the adjustable end stop bracket onto the end of the stabilizing bar. Slide the adjustable centre bracket onto the bar and loosely fit the wall bracket on the other end of the bar.
- Place the slotted section of the end stop bracket over the flat glass panel. Slide the centre bracket over the curved panel and place in position. When everything is plumb and level (Fig 8), mark position of wall bracket (Fig 9). Remove the stabilising bar assembly, drill and plug for the wall bracket and secure into position using the screw provided. Replace the complete stabilising bar assembly and secure by tightening the grub screws in the bracket.
- Finish off by fitting the screw cover caps and seal around the unit using silicone (Fig 10).

Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9

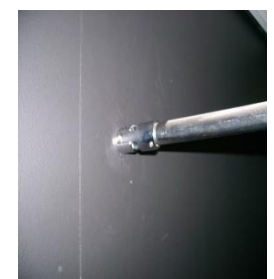
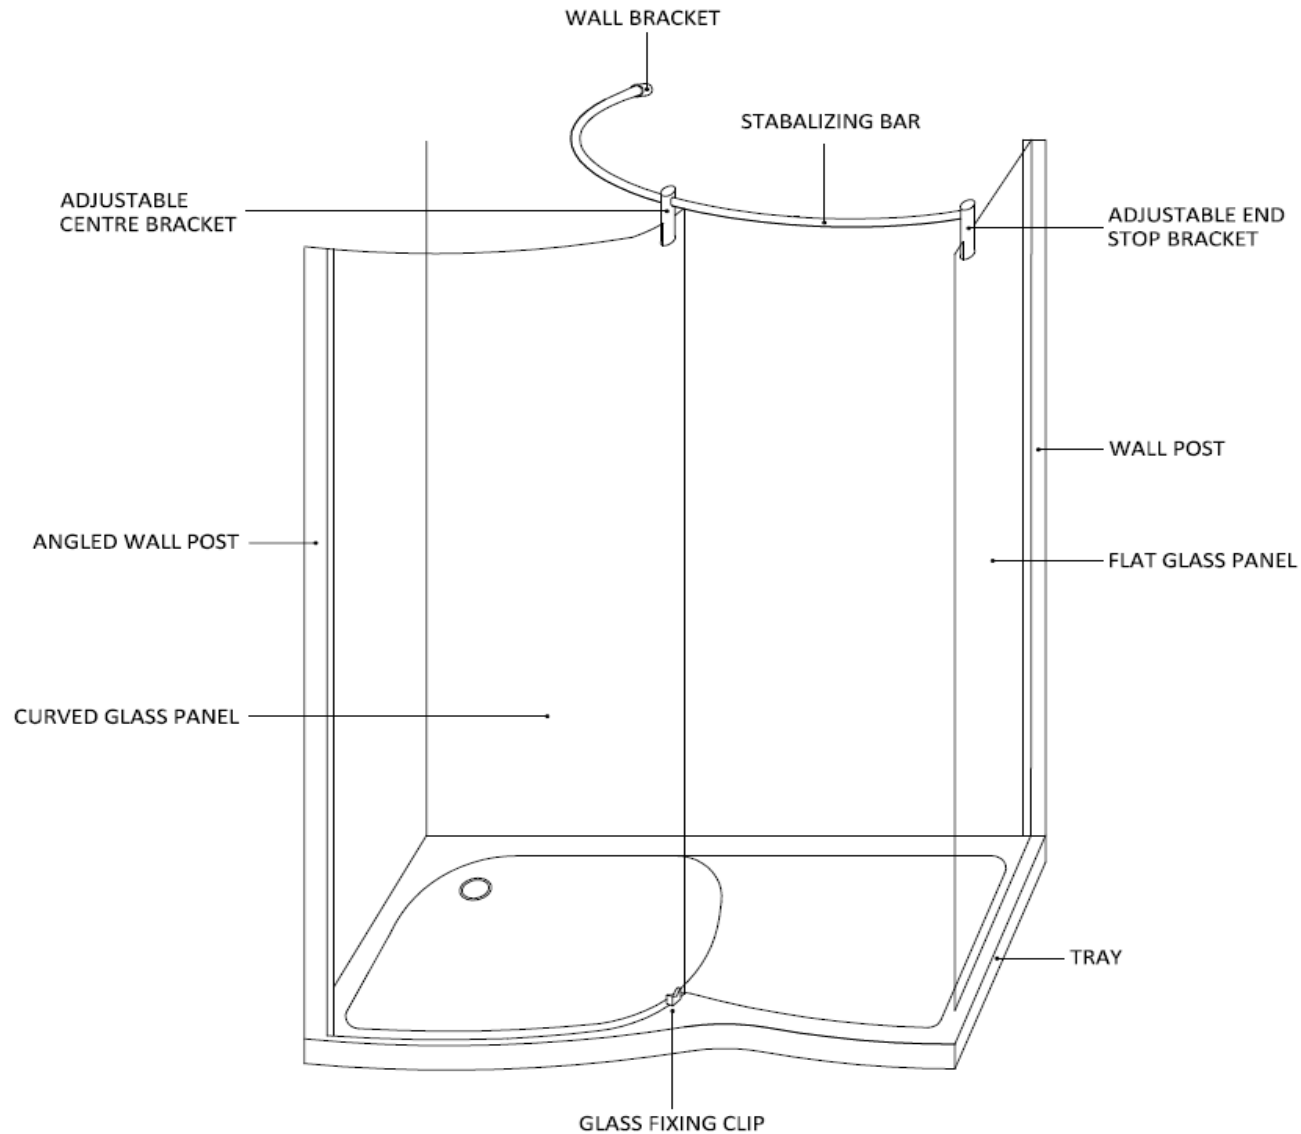






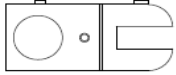





Figure 10



## AQW - 1400 WALK-IN SHOWER ENCLOSURE FITTING INSTRUCTION



AQW - PARTS LIST		
	6	30 mm SCREWS
	6	WALL PLUGS
	10	SCREW COLLAR
	10	SCREW COVER CAP
	4	10 mm SCREWS
	1	STABILISING BAR
	1	ALLEN KEY
	1	ADJUSTABLE CENTRE BRACKET
	1	ADJUSTABLE END STOP BRACKET
	1	WALL BRACKET
	1	GLASS FIXING CLIP (CHROME)