

## **AQUD - 'D' SHAPED QUADRANT ENCLOSURE FITTING INSTRUCTION**



1. Level shower tray across all corners and along edges




2. Seal tray to wall or tiles. Do not set tray into wall more than 10mm



3. Set wall channel 20mm in from edge of tray. Make sure it is vertical then mark fastening holes, drill and plug wall and secure channel to wall



4. Attach top and bottom curved rails to glass panels to create a framework

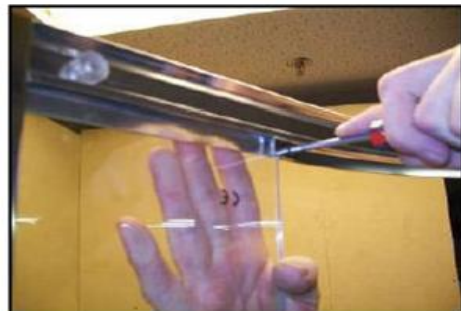

5. Attach glass clamps to pre-drilled holes



6. Fit 2nd wall channel to framework



7. Slide enclosure into fitted wall channel and set and secure 2nd channel to wall



8. Adjust enclosure to follow profile of shower tray, easing it in or out of wall channels

9. Fit the non-sprung wheels into the top & bottom holes in the door. The wheels are fitted to the door first and then slotted into the track via the central cut-out in both the top & bottom rails.



## AQUD - 'D' SHAPED QUADRANT ENCLOSURE FITTING INSTRUCTION



11. Fit the plastic door stops to the pre drilled hole



12. Fit the door handles ensuring there is a plastic washer either side of the glass and the large retaining knob is at the top



13. Fit the shorter water seals to the fixed glass



14. Fit the longer water seals to the doors



15. Fit the magnetic strips to the inner edges of the doors. If they repel flip one round the other way



16. Seal the OUTER SIDE of the wall channels along the wall and along the frame joint – (the two vertical joints)



17. Seal the OUTER SIDE of the curved profile to the tray



18. Fit the gasket seal to the outer side of the glass slackening and re-tightening the glass clamp if necessary

